



## BARVA PANELŮ




Stucco

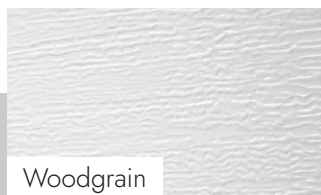

Woodgrain

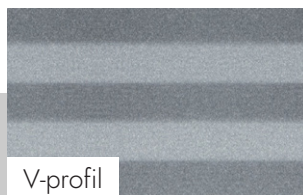


V-profil

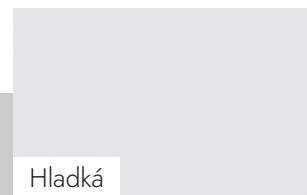

Hladká

### LAMELA STUCCO

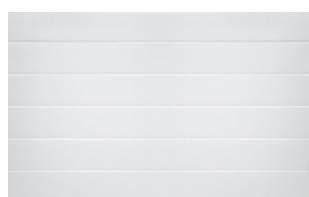

9010 Čistá bílá  
533 - 9002 / 672 - 9010




9002 Šedobíla  
531 - 9002 / 671 - 9010  
531-80 - 9002




9006 Bílý hliník  
532 - 9002 / 673 - 9010




9007 Šedý hliník  
536 - 9002 / 694 - 9010

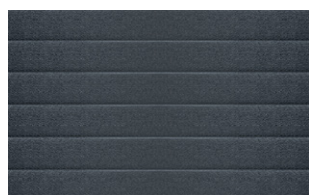


7016 Antracit  
534 - 9002 / 678 - 9010

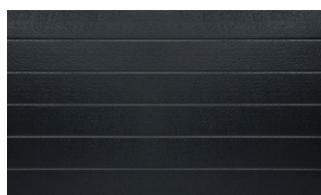

7021 Šedočerná  
540 - 9002

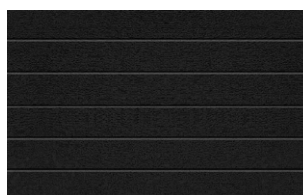

9005 Černá  
542 - 9002 / 684 - 9010

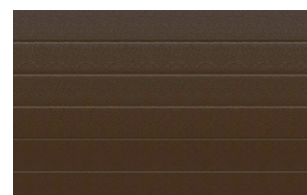


8014 Šepiově hnědá  
538 - 9002 / 679 - 9010




1021 Hořčičná žlutá  
673 - 9010



3000 Ohnivě červená  
675 - 9010

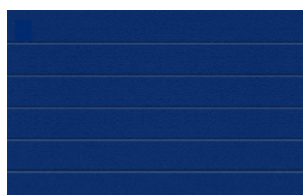


5010 Enziánová modř  
535 - 9002 / 676 - 9010

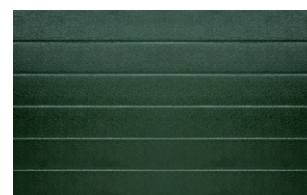


6009 Jedlová zelená  
677 - 9010

### LAMELA WOODGRAIN

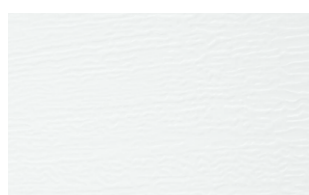

9016 Dopravní bílá  
664 - 9010

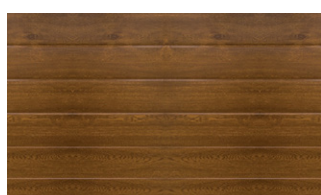


Zlatý dub  
688 - 9010




Ořech  
695 - 9010

### LAMELA HLADKÁ

## V-PROFIL HLADKÁ

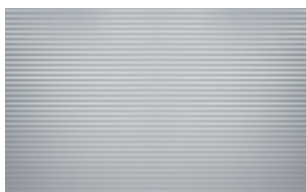


9006 Bílý hliník  
539 - 9002 / 687 - 9010

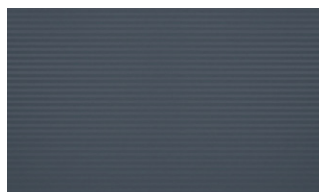

7016 Antracit  
682 - 9010

## BEZ DRÁŽKY STUCCO

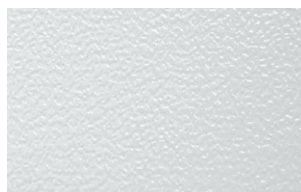


9016 Dopravní bílá  
699 - 9010

## BEZ DRÁŽKY WOODGRAIN



9016 Dopravní bílá  
669 - 9010

## BEZ DRÁŽKY HLADKÁ



9016 Dopravní bílá  
667 - 9010



7016 Antracit  
668 - 9010



DB 703  
680 - 9010


## STŘEDOVÁ DRÁŽKA WOODGRAIN



9016 Dopravní bílá  
660 - 9010




7016 Antracit  
661 - 9010

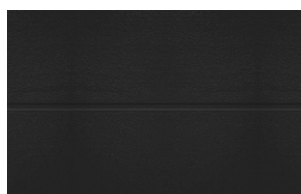


9005 Černá  
662 - 9010

## STŘEDOVÁ DRÁŽKA HLADKÁ

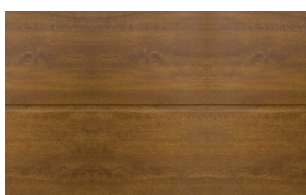

9016 Dopravní bílá  
660 - 9010

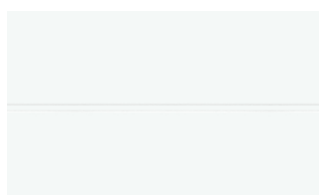

7016 Antracit  
661 - 9010